
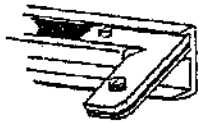



# Metal

*by Frame Fit Co.*


## FRAME ASSEMBLY INSTRUCTIONS

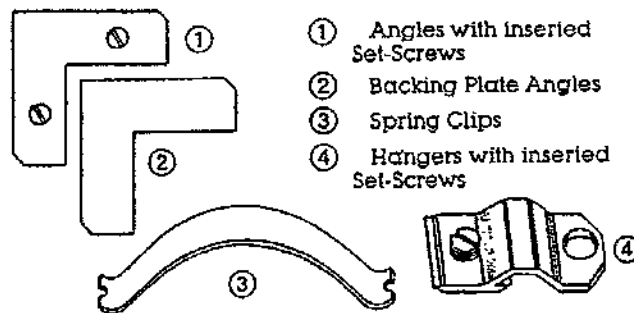

Select the frame section to be used as the bottom. Insert a backing plate and an angle with inserted set-screws into the slot provided on one end of the section.

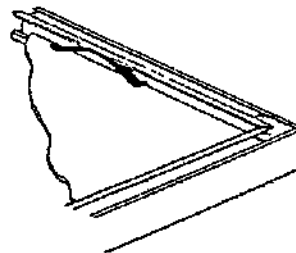


Use the spring clips provided to hold the mounted work securely in the frame. Flatten the spring clips, if necessary, and slide them between the frame and the backing material using two spring clips on each side of the frame. Larger frames may require additional spring clips. Once framing is completed, all mitered corners can be adjusted if necessary.

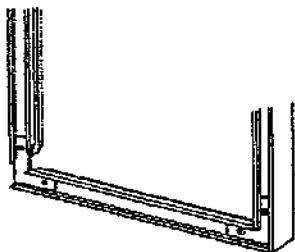

Slide one side section of the frame onto the angles in the bottom frame section until the mitered corners meet. Secure the frame sections together by tightening the set-screws, making sure the corners remain butted together. Attach the other side frame section to the bottom section in the same manner.

Insert work to be framed into the open end of the frame. Then using the remaining angles and the top frame section, slide into place over the work. Make sure the mitered joints on all corners are butted against one another, and secure the entire frame together by tightening the set-screws in the angles.

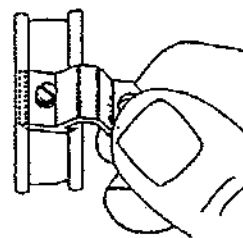


Holding the hanger between your thumb and forefinger, insert the end with the screw into the frame channel, keeping the hole for the wire toward the frame interior. Tighten the screw to secure the hanger in the desired position. Hangers are adjustable to any position along the frame section and are easily removed.

# Wood

*by Frame Fit Co.*

## ASSEMBLY INSTRUCTIONS

- (1) Lay frame face up on a clean flat surface.
- (2) Arrange pieces to arrive at the best grain match.
- (3) Place frame face down, making sure you have not changed your grain arrangement.
- (4) Apply a small amount of glue to all of the mitered surfaces.
- (5) Insert appropriate plastic thumbnail (tapered end first) into both mitered pieces (1 corner) at the same time. Proceed to install all 4 thumbnails the same way.
- (6) Carefully flip frame back over with the frame face side up and the thumbnails down on the table top.

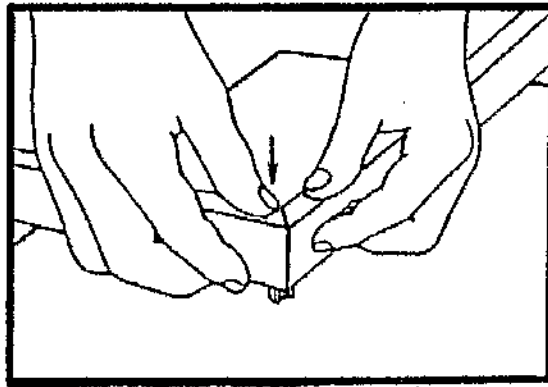


- (7) Proceed to push down on the face of frame (2 of the four corners at the same time) with the palms of your hands.

**CAUTION:** Take care not to pinch your palms in miter while pressing down.

- (8) Do other two corners in the same manner.
- (9) Adjust the corners at this time and then allow the frame to sit for one hour, for the glue to set.

### TO INSTALL CLIPS

- (1) Position the bent edge of clip in slot on back of frame
- (2) Press clip down with thumb.

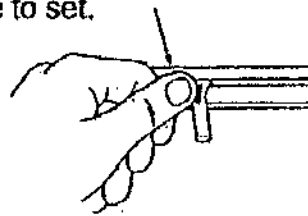

### TO INSTALL HANGER

- (1) Mark spot one third way down from top of frame.
- (2) Screw hanger in slot.

PLEASE CALL IF ANY QUESTIONS 1-800-523-3693

# EVOLUTIONS

by Frame Fit Co.

## ASSEMBLY INSTRUCTIONS

**EVOLUTIONS** mouldings may be joined by glue, underpinning or thumbnailing.

Frame Fit will supply glue for each frame. The glue supplied, if used by itself, will be as strong or stronger than the other two methods.


Lay out frame face up on a clean, dry, flat, protected surface. You will join one corner at a time.

Apply 1-10 **SMALL** size drops (drop size "●") on **one surface only, NOT BOTH**. The number of drops will depend on the size of the moulding. Keep glue 1/8" away from **visible** front and side edges. This will allow glue to spread without squeezing out of visible joints. Align corner to which glue has been applied with light pressure. Once corner is perfectly aligned, apply more pressure for 20-30 seconds and then proceed to next corner. **Do not apply full pressure until corner is properly aligned, as bonding will start immediately.** Finished frame will reach full bonding strength in just 4 minutes. If glue accidentally oozes onto visible surface of frame, leave it alone; it will dry clear. **Wiping it will only smear the surface.**


**TO INSTALL HANGERS:** Mark spot one third way down from top of frame and screw hanger in slot.

**TO INSTALL SPRINGS:** Position the bent edge of clip in slot on back of frame and press down with thumb.


**HINT:** Some frames do not have a routed channel in the back, if not, to install the hangers & spring clips (supplied), punch a pilot hole in the frame first with an awl to make starting the screw easier.

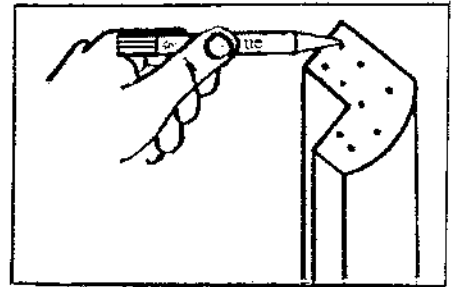

apply drops to **ONE SIDE ONLY**

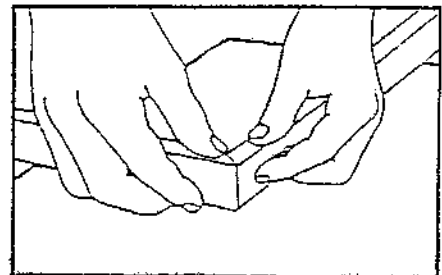

**PUT TOGETHER, CAREFULLY ALIGN BOTH SECTIONS & HOLD TIGHTLY FOR 20 SECONDS.**

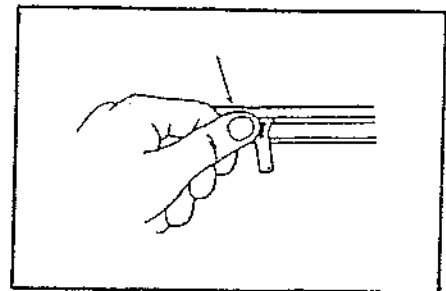

**PRESS CLIP DOWN WITH THUMB**

## WARNING

**THE GLUE SUPPLIED IS SIMILAR TO SUPER GLUE. KEEP OUT OF REACH OF CHILDREN. IF GLUE GETS INTO EYES FLUSH IMMEDIATELY & CALL PHYSICIAN. IF IT GETS ONTO HANDS USE NAIL POLISH REMOVER AND REMOVE THE GLUE THOROUGHLY. \*\*\* KEEP GLUE REFRIGERATED WHEN NOT IN USE\*\*\***